



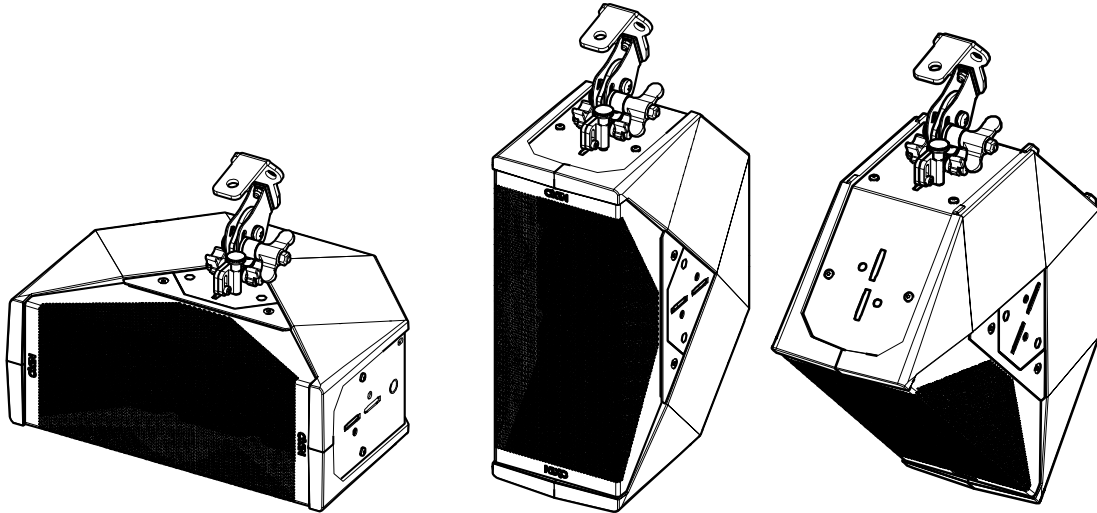



## Quick Release Clamp

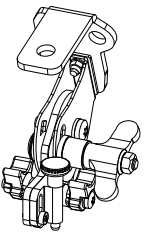

<b>Contents:</b>			<b>Safety:</b> Use the sling and the quick link to secure with the free hole.
<b>X1</b> 	<b>X1</b> 	<b>X1</b> 	

**Weight: 0.4 kg / 0.88 lb**




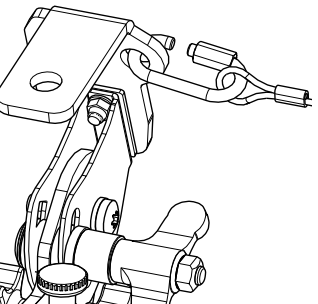
## Dimensions:

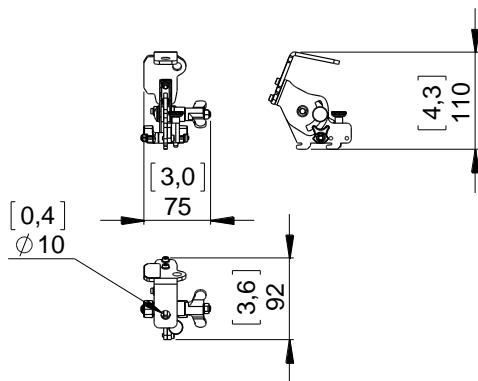

## Implementation:




QRA can be moved in 2 different positions on 5 locations.

You can find 5 locations, 2 to use horizontally and 3 vertically.

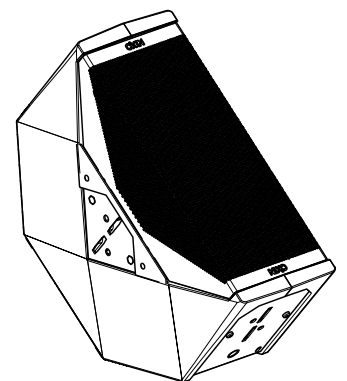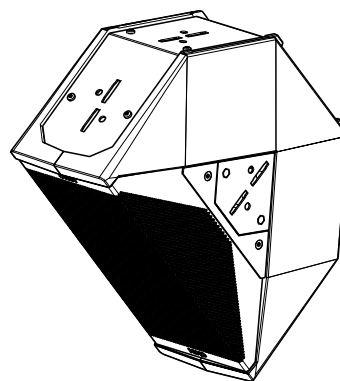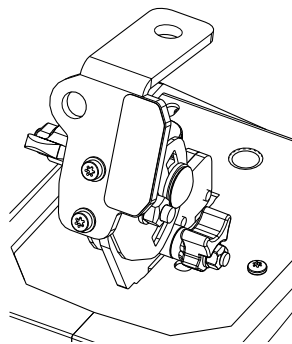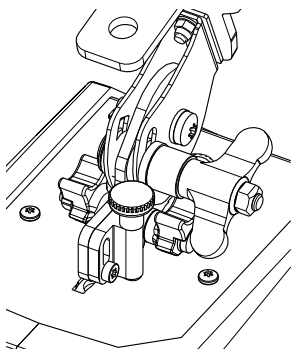

Insert QRA and push until the locking device locks automatically.

Pull up the locking device and push QRA to remove it.

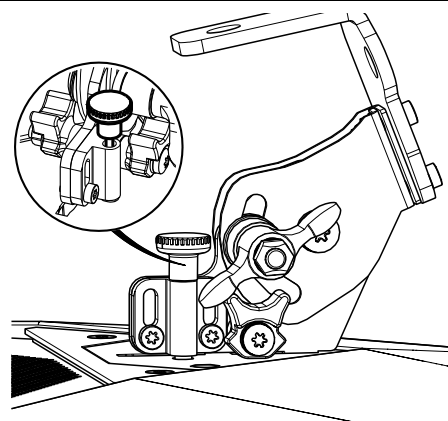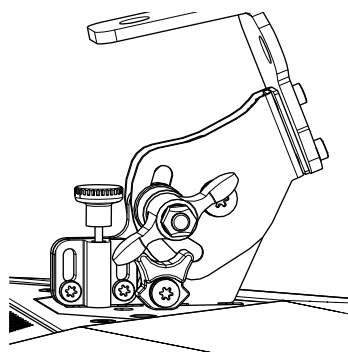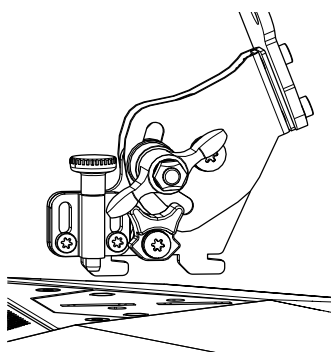

# NEXO


www.nexo-sa.com

ZA du pre de la Dame Jeanne  
60128 PLAILLY-France


- Read this document before using.
- Keep this document.
- Observe all warnings and cautions.

## Use:

- Use the levers to lock QRA on ID24

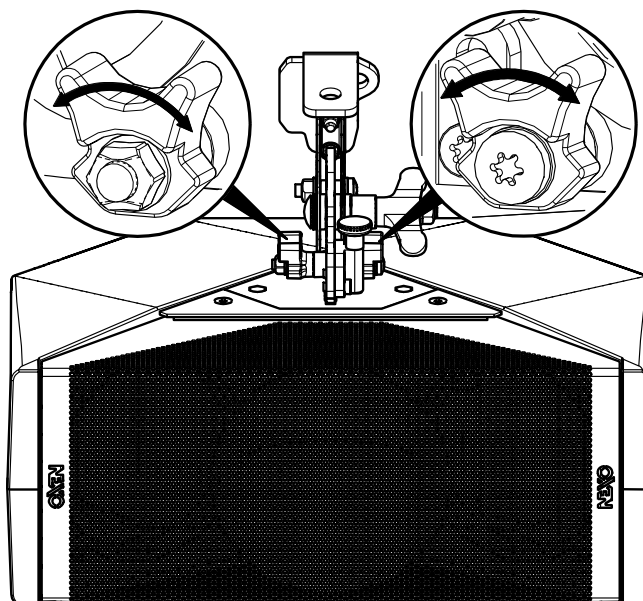

- Tilt: Loosen the wing nut to adjust the angle (-45° to +45°).

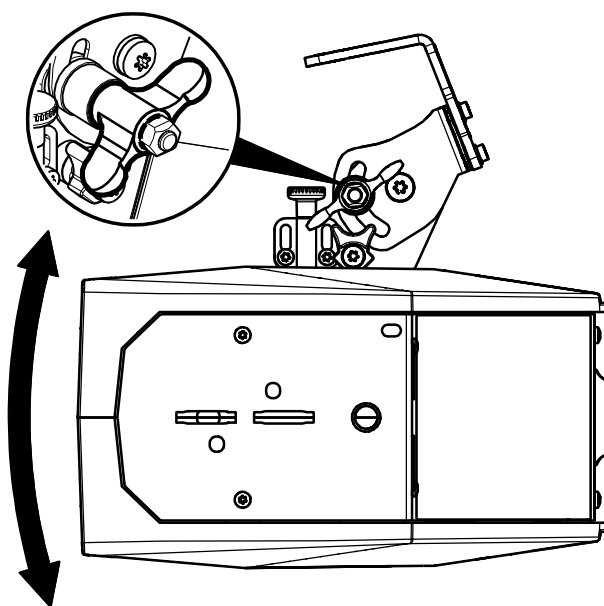

# NEXO





www.nexo-sa.com  
ZA du pre de la Dame Jeanne  
60128 PLAILLY-France

- Read this document before using.
- Keep this document.
- Observe all warnings and cautions.

**Warning :**

**Negative tilt: locking device towards the front of the cabinet.**

**Positive tilt: locking device towards the back of the cabinet.**

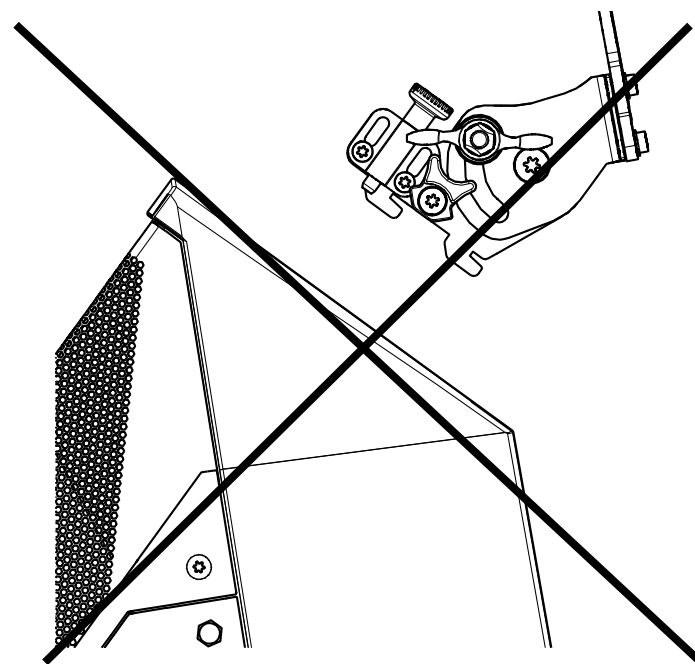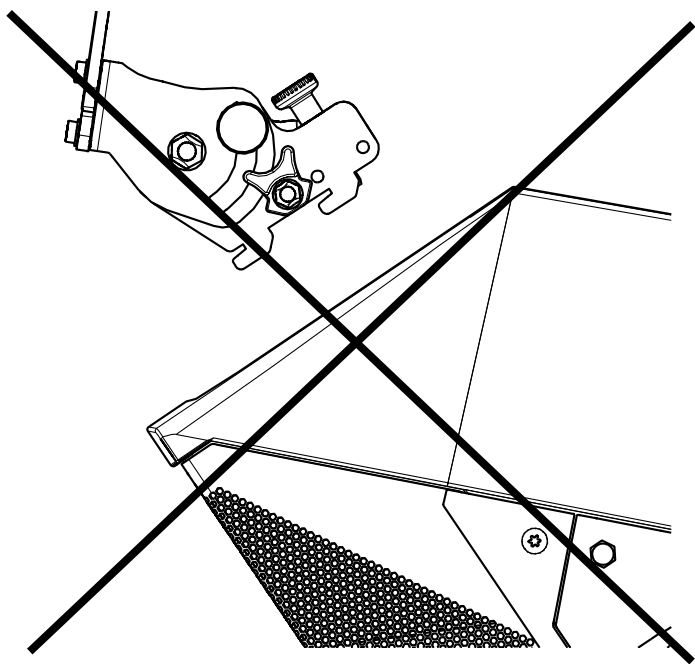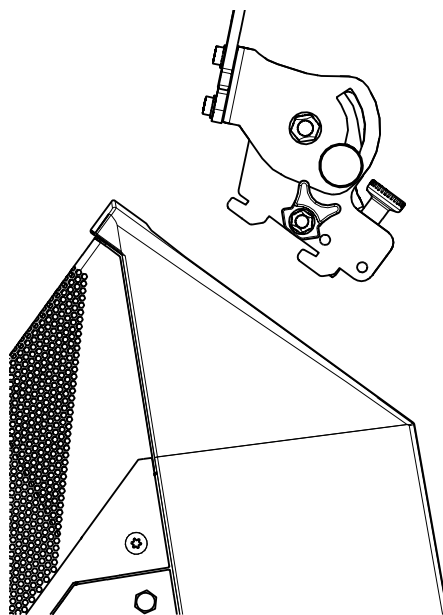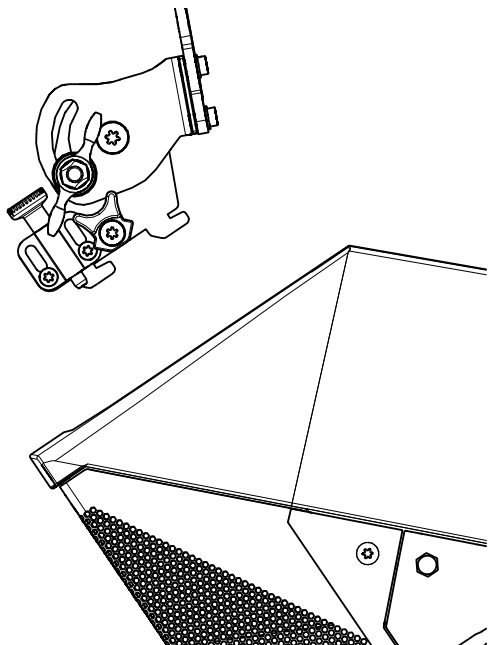

- **NEXO** cannot accept responsibility for accidents caused by any factor other than defects in this product itself.
- Please check the web site [www.nexo-sa.com](http://www.nexo-sa.com) for the latest update.

**NEXO**

www.nexo-sa.com  
ZA du pre de la Dame Jeanne  
60128 PLAILLY-France

- Read this document before using.
- Keep this document.
- Observe all warnings and cautions.